

X5 Invisible Dive Case Pro

User Guide

In the Box

- 1x Invisible Dive Case Pro
- 12x Anti-Fog Inserts
- 1x 1/4" to 3-Prong Adapter
- 1x Thumb Screw
- 1x Storage Bag
- 1x Weight Block


Specs

- Weight: 410 ± 5 g (14.46 ± 0.18 oz)
- Maximum Depth: 164 ft (50 m)

How to Use


1. Open the Case

Lift the locking arm (①) and release the lock catch (②). Once all four buckles are unhooked, open the dive case.

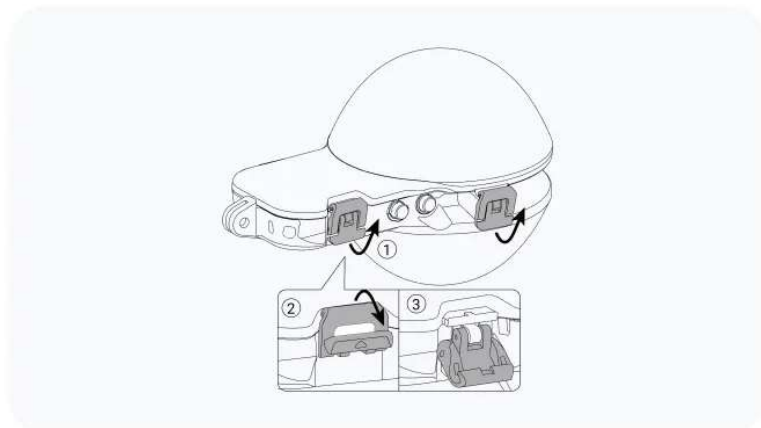

2. Attach Anti-Fog Inserts

Insert the anti-fog inserts as shown below (upper section — smaller; lower section — bigger).

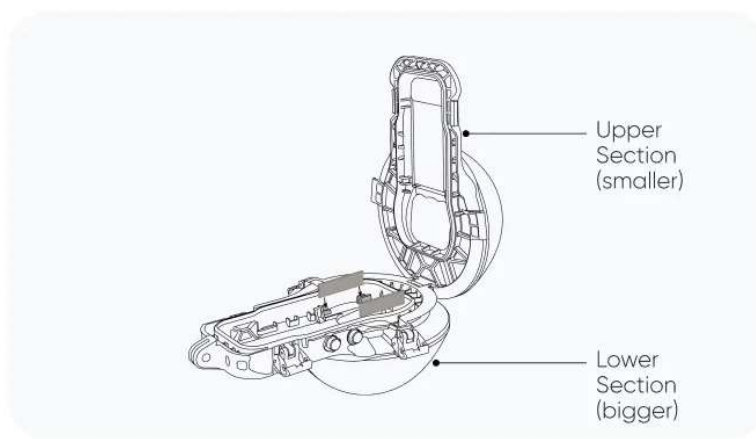


Note:

Ensure the inserts are completely dry before use. After repeated use in humid conditions, the inserts may become damp, affecting their anti-fog performance.

When using third-party anti-fog inserts, ensure that the size is within 37.1 x 19 x 1.2 mm. If the insert is too large, it may cause water leakage and damage the camera.

3. Insert the Camera

1. Remove any lens guards and ensure that the camera lenses and the dive case interior are clean and free from dirt and dust.
2. Place the camera into the dive case as shown in the diagram below. Ensure the buttons are aligned correctly (Power Button and Quick Button).

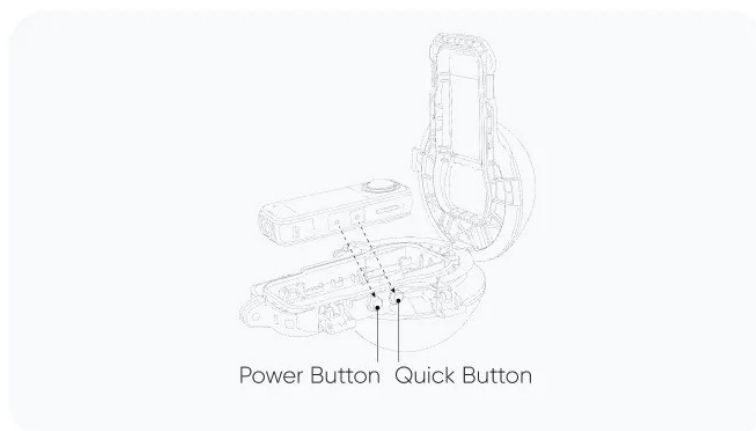


Note:

When in Dive Case Mode, press the Power Button to switch shooting modes and the Quick Button to start or stop shooting. For more information, refer to "Button Instructions in Dive Case Mode" below.

Take care not to scratch the lens when inserting the camera into the case.

4. Close the Case

Close the dive case (①). Hook the locking arm onto the lock catch (②), then press down on the locking arm (①) until you hear a click. Repeat this process to secure all buckles.

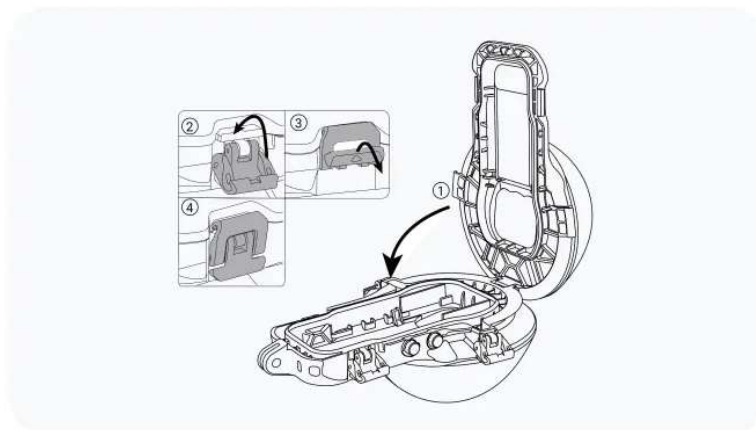

Note:


Before use, ensure the dive case is firmly closed. Check that the parts of the dive case in contact with its rubber seal are free of dirt and dust.

For the best shooting results, keep the case lens clean.

5. Attach Other Accessories

Install Selfie Stick and Weight Block

1. When using a selfie stick, mount it to the dive case with the included Anti-Tilt 1/4" to 3-Prong Adapter and Thumb Screw. To prevent the selfie stick or dive case from coming loose due to strong water flow, be sure to fully tighten the Thumb Screw using the wrench.
2. For better balance underwater, attach the weight block to the dive case first, then install the selfie stick. To achieve the Invisible Selfie Stick effect, always keep the selfie stick and the case in a straight line.

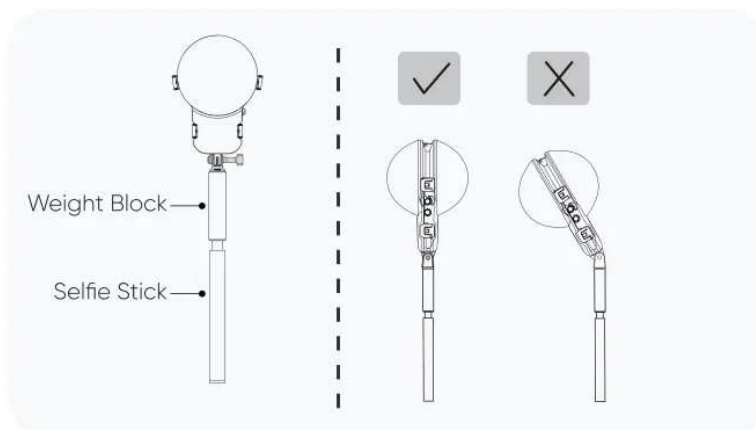

Note:


When using the dive case with the weight block and selfie stick, avoid fully extending the selfie stick to reduce shaking while shooting.

Before entering the water, check the connections between the dive case, weight block, and selfie stick to make sure everything is securely attached.


The dive case is highly buoyant. When freediving, it is not recommended to use it with the Insta360 floating hand grip. Instead, attach the weight block and hold it while diving and filming.

Using the Storage Bag


1. Unclip the buckle, lift the flap, and place the dive case with the weight block and selfie stick into the storage bag.

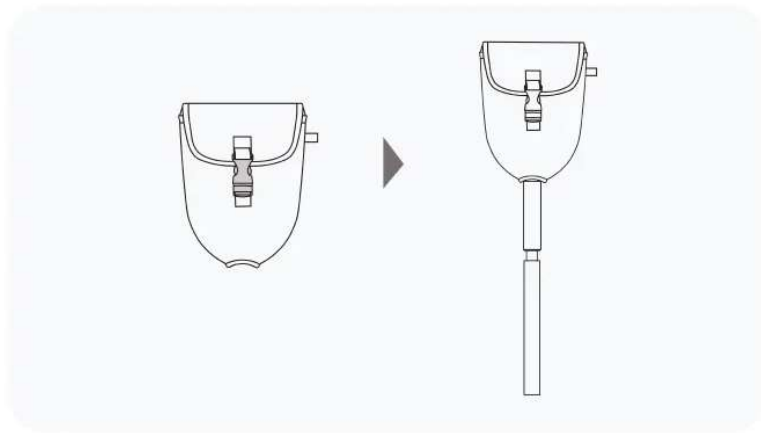


2. Attach the storage bag to a Buoyancy Control Device (BCD) in one of the following ways:
- Use the Velcro on the back of the storage bag to attach it to the shoulder strap of the BCD.

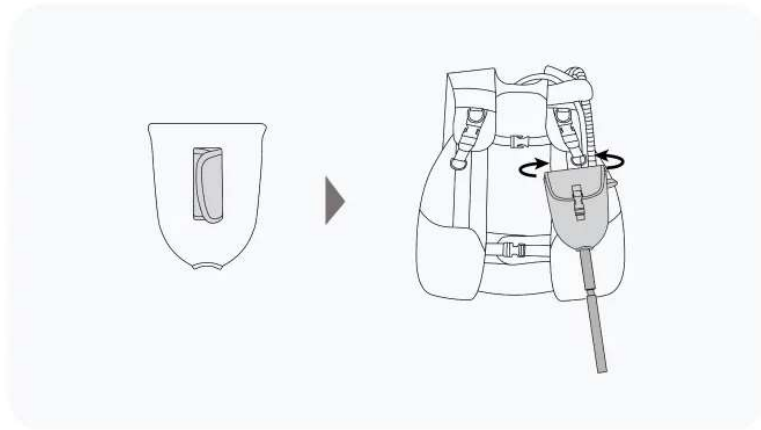

- Use the Velcro on the back of the storage bag to attach it to the waist strap of the BCD.

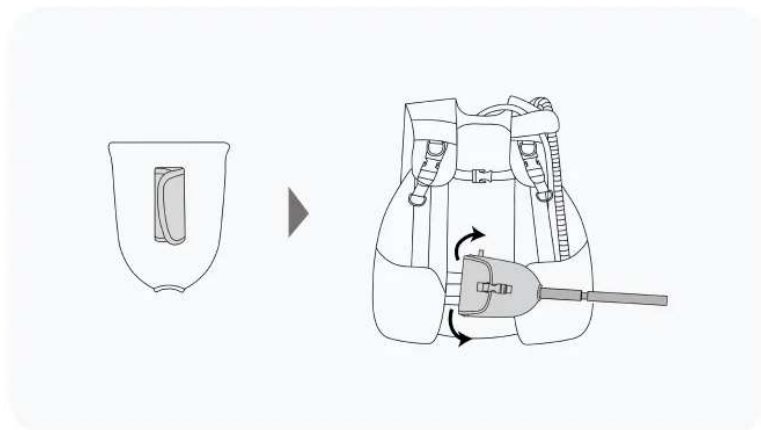

- Use the side attachment loop on the storage bag together with a carabiner (sold separately) to secure it to a D-ring on the BCD.

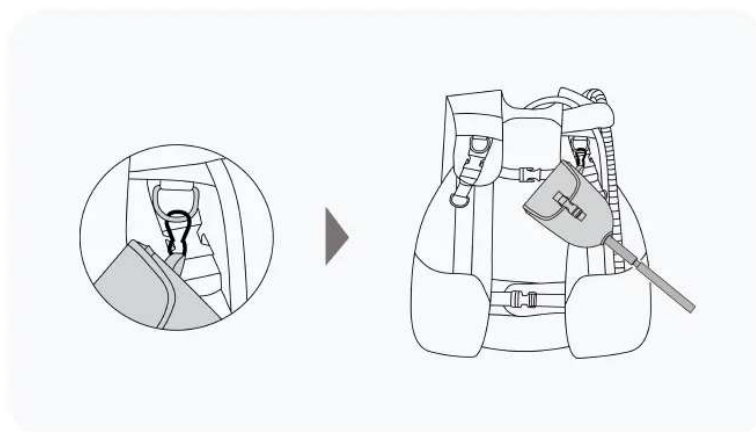

Note:

When using Velcro to attach the storage bag, it's recommended to also tether it to the BCD via the side attachment loop to prevent it from coming loose.

6. Stitching

1. For optimal stitching, keep one lens facing your subject. To reduce glare underwater, avoid pointing the dive case lenses toward the surface.
2. After shooting, open the files in the Insta360 app or Studio. Footage captured with the Invisible Dive Case Pro will be automatically stitched.
3. When the camera is out of the case, swipe up on the camera touchscreen to exit Dive Case Mode for optimal image quality.

Button Instructions in Dive Case Mode

Power Button (Switch Shooting Modes)

Camera Status	Single Press	Long Press
Power off	—	Power on
Screen off	—	Screen on
Preview	Switch shooting mode	Enter Mode Switch page, and switch to next mode
Mode Switch	Switch to next mode	Power off
Shooting	—	Screen off / Screen on

Tip:

- Swipe down on the camera's touchscreen to open the shortcut menu and tap "Accessories". Then, tap Invisible Dive Case to enter the Dive Case Mode settings page.
- By default, a single press of the Power Button switches the shooting mode. In the Dive Case Mode settings, you can customize the button's function to switch shooting modes, switch presets, or turn the screen on/off.
- When the camera is powered on, place it into the dive case and close the case. The camera will automatically detect the dive case and enter Dive Case Pro Mode.
- When the camera is in Dive Case Mode and powered on, it will automatically switch to Dive Case Pro Mode if it detects the Invisible Dive Case Pro.
- The Invisible Dive Case Pro uses magnetic sensors for recognition. If the dive case isn't fully closed during installation, the camera might mistake it for another accessory (such as a lens guard). Make sure to fully close the case, and it will automatically switch to Dive Case Pro Mode.

Quick Button

Camera Status	Single Press	Double Press
Power off	Start QuickCapture	No response
Screen off	Start shooting	Switch between front/rear mode in Single Lens Mode, and switch between front/rear view in 360° Mode
Preview	Switch between Single Lens Mode and 360° Mode	—
Mode Switch	Select the mode and return to preview	—
Shooting	Stop shooting	No response