



Assembly Instructions STORAGE BOXS

1/2


Assembled View.

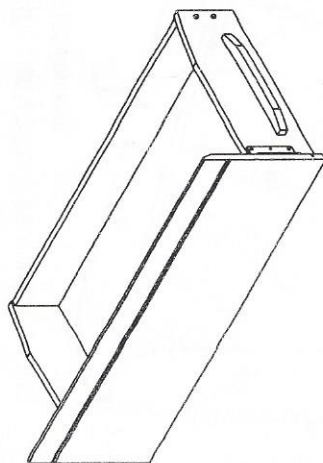


Part in Box

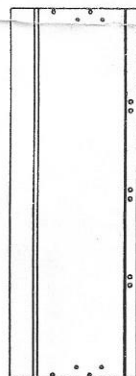



Drawer Front x 2 (A)

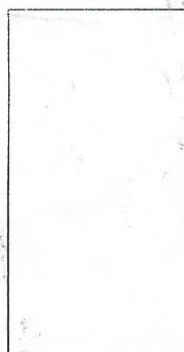

Drawer Bottom x 2 (B)

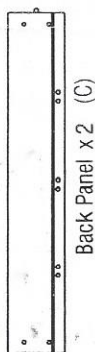

Back Panel x 2 (C)

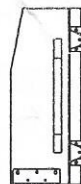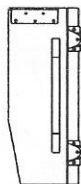


Side Panel (D)
x 4



Support Rails (E)
x 6

1 Fit the Metal Bracket to Side Panels (D).

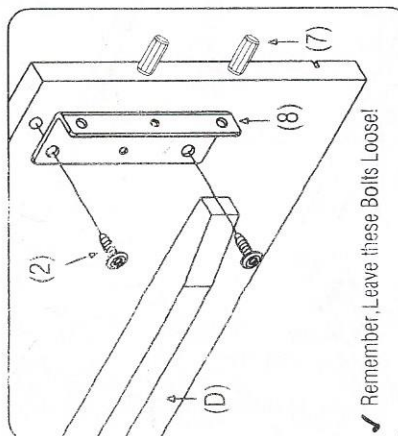


Remember, Leave these Bolts Loose!

Lay the Drawer Front (A) on a smooth, flat surface so the holes are facing upwards.

Fit the Side Panels (D) to the Drawer Front (A), fitting the dowels (7) in the holes. Use two JCBC M6 x 15mm to attach the Side Panel (D) in place, but don't fully tighten these yet. Leave them a bit loose, to make fitting the Back Panel (C) easier.

Fit the Support Rail (E) into dowel (5) holes provided on the Drawer Front (A).

2 Fit Side Panel (D) and Support (E) onto Drawer Face (A).

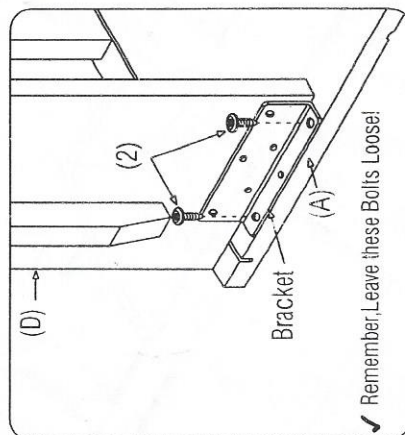

Remember, Leave these Bolts Loose!

Hardware List

1.	JCBC M6 x 60mm		x 8
2.	JCBC M6 x 15mm		x 16
3.	M6 x 13mm Barrel Nut		x 8
4.	Pan Head Screw M4 x 32mm		x 12
5.	Wood Dowel M8 x 35mm		x 24
6.	M4 Allen Key		x 1
7.	Wood Dowel M10 x 35mm		x 12
8.	Metal Brackets		x 4

Tool required for assembly:


- * Allen Key (supplied)
- * Phillips Screwdriver (not supplied)

Assembly Instructions STORAGE BOXES

2/2


③ Fit the Plywood Panel (B).

Guide the Plywood Panel (B) in carefully so that it won't jump out of its grooves.

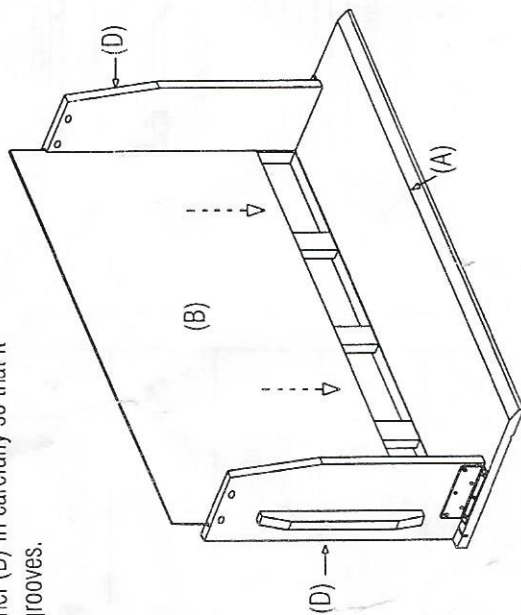


④ Fit the Back Panel (C).

Gently spread the Side Panels (D) apart a bit to fit the dowels (7). Afterwards, tighten the bolts on the Brackets.

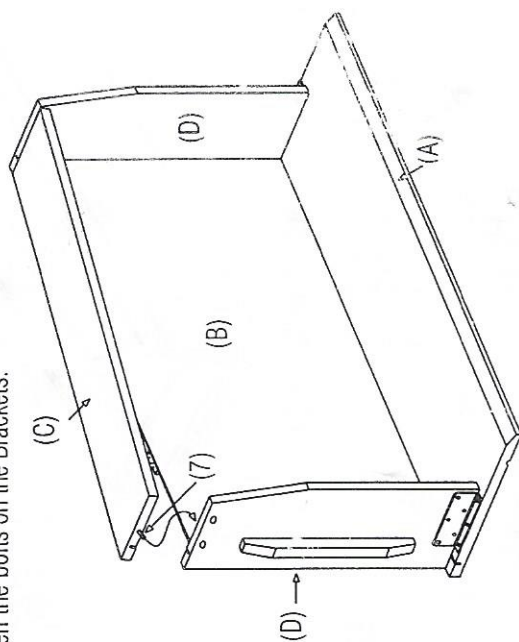


⑤ Bolt Back Panel (C) in Place.

Carefully turn the assembled Drawer down. Using the JCBG M6 x 60mm (1) and Barrel Nuts (3), secure the Back Panel (C) in place.

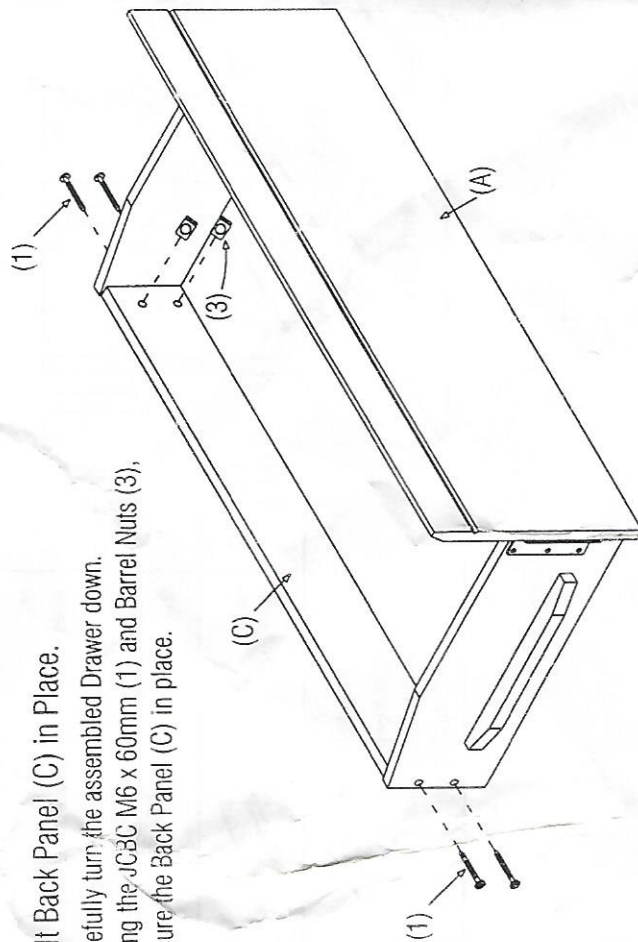

⑥ Fit the Pan Head Screw (4) to the Support Rails (E).


From the bottom, use 32mm Pan Head Screw (total 6) to fix the Supports Rails (E) to both ends.

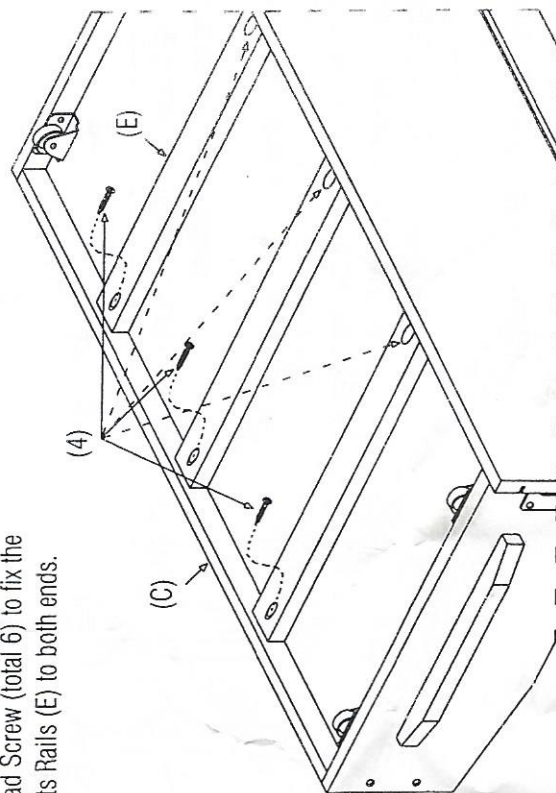

Assembly Instructions Cosmos Bunk Bed


1/4

Part in Box 1

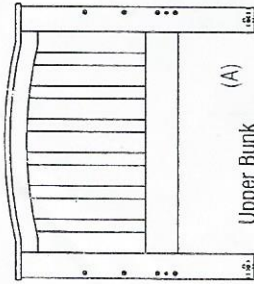


Upper Bunk (A)
(Left Hand) x 1


Note : No Holes!

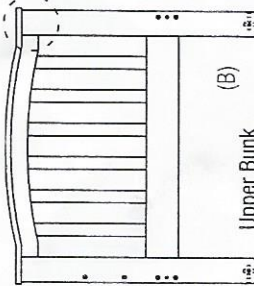

Upper Bunk (B)
(Right Hand) x 1

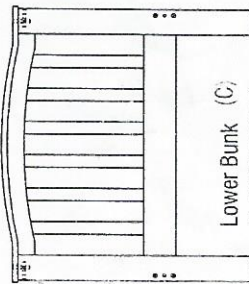

Lower Bunk (C)
(Left Hand) x 1

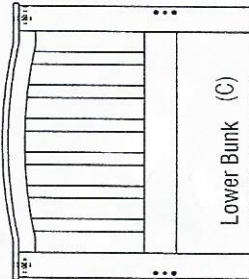

Lower Bunk (C)
(Right Hand) x 1

Part in Box 2




(D) Front Upper Guardrail x 2




(E) Back Upper Guardrail x 2



(F) Guardrail Spindle x 4



(G) Upper Side Rail x 2



(H) Lower Side Rail x 2




(I) Ladder Rail x 2



(J) Ladder Steps x 4



(K) Set of Slats x 2

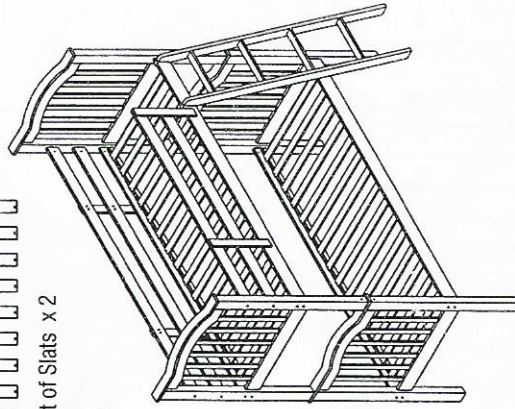

Hardware List

1.	JCBC M6 x 80mm	x 22
2.	JCBC M6 x 35mm	x 16
3.	M6 x 13mm Barrel Nut	x 22
4.	Wood Dowel M10 x 40mm	x 8

5.	Metal Pin M10 x 100mm	x 4
6.	CSK M4 x 25mm	x 44
7.	M4 Allen Key	x 1
8.	Wooden Button 15.5mm	x 4

9.	JCBB M8 x 35mm	x 32
10.	M5 Allen Key	x 1
11.	JCBC M6 x 60mm	x 8

Tool required for assembly :

- * Allen Key (supplied)
- * Phillips Screwdriver (not supplied)



WARNING !!

IMPORTANT-READ CAREFULLY-RETAIN FOR FURNITURE REFERENCE

- MAX. MATTRESS HEIGHT 6.25" (160mm)
- Max thickness of the mattress to be used with the bed must be at least 6.25" (160mm) below the upper edge of the safety barrier
- Use only mattress which is 74"-75" long and 36"-37" wide on upper bunk
- The bunk bed or high bed should not be used if any structural part is broken or missing
- High beds and the upper bed of bunk bed are not suitable for children under six years due to risk of injury from falls.
- Warning - Children can become trapped between the bed and the wall. To avoid risk of serious injury the distance between the top barrier and the wall shall not exceed 75mm or shall be more than 230mm*
- STRANGULATION HAZARD - Never attach or hang item to any part of the bunk bed that are not designed for use with the bed, for example, but not limited to, hook, belt, and umbrellas.
- EN 747 Part 1 and Part 2, 2007

Assembly Instructions Cosmos Bunk Bed

2/4

1


Assemble the Upper Bunk (A&B) with the Side Rails (G) and Front & Back Guard Rails (D&E).

1.	JCBC M6 x 80mm	x 14
3.	M6 x 13mm Barrel Nut	x 14
4.	Wood Dowel M10 x 40mm	x 4
9.	JCBB M8 x 35mm	x 24

2

Assemble the Lower Bunk (C) with the Lower Side Rails (H).

1.	JCBC M6 x 80mm	x 8
3.	M6 x 13mm Barrel Nut	x 8
4.	Wood Dowel M10 x 40mm	x 4

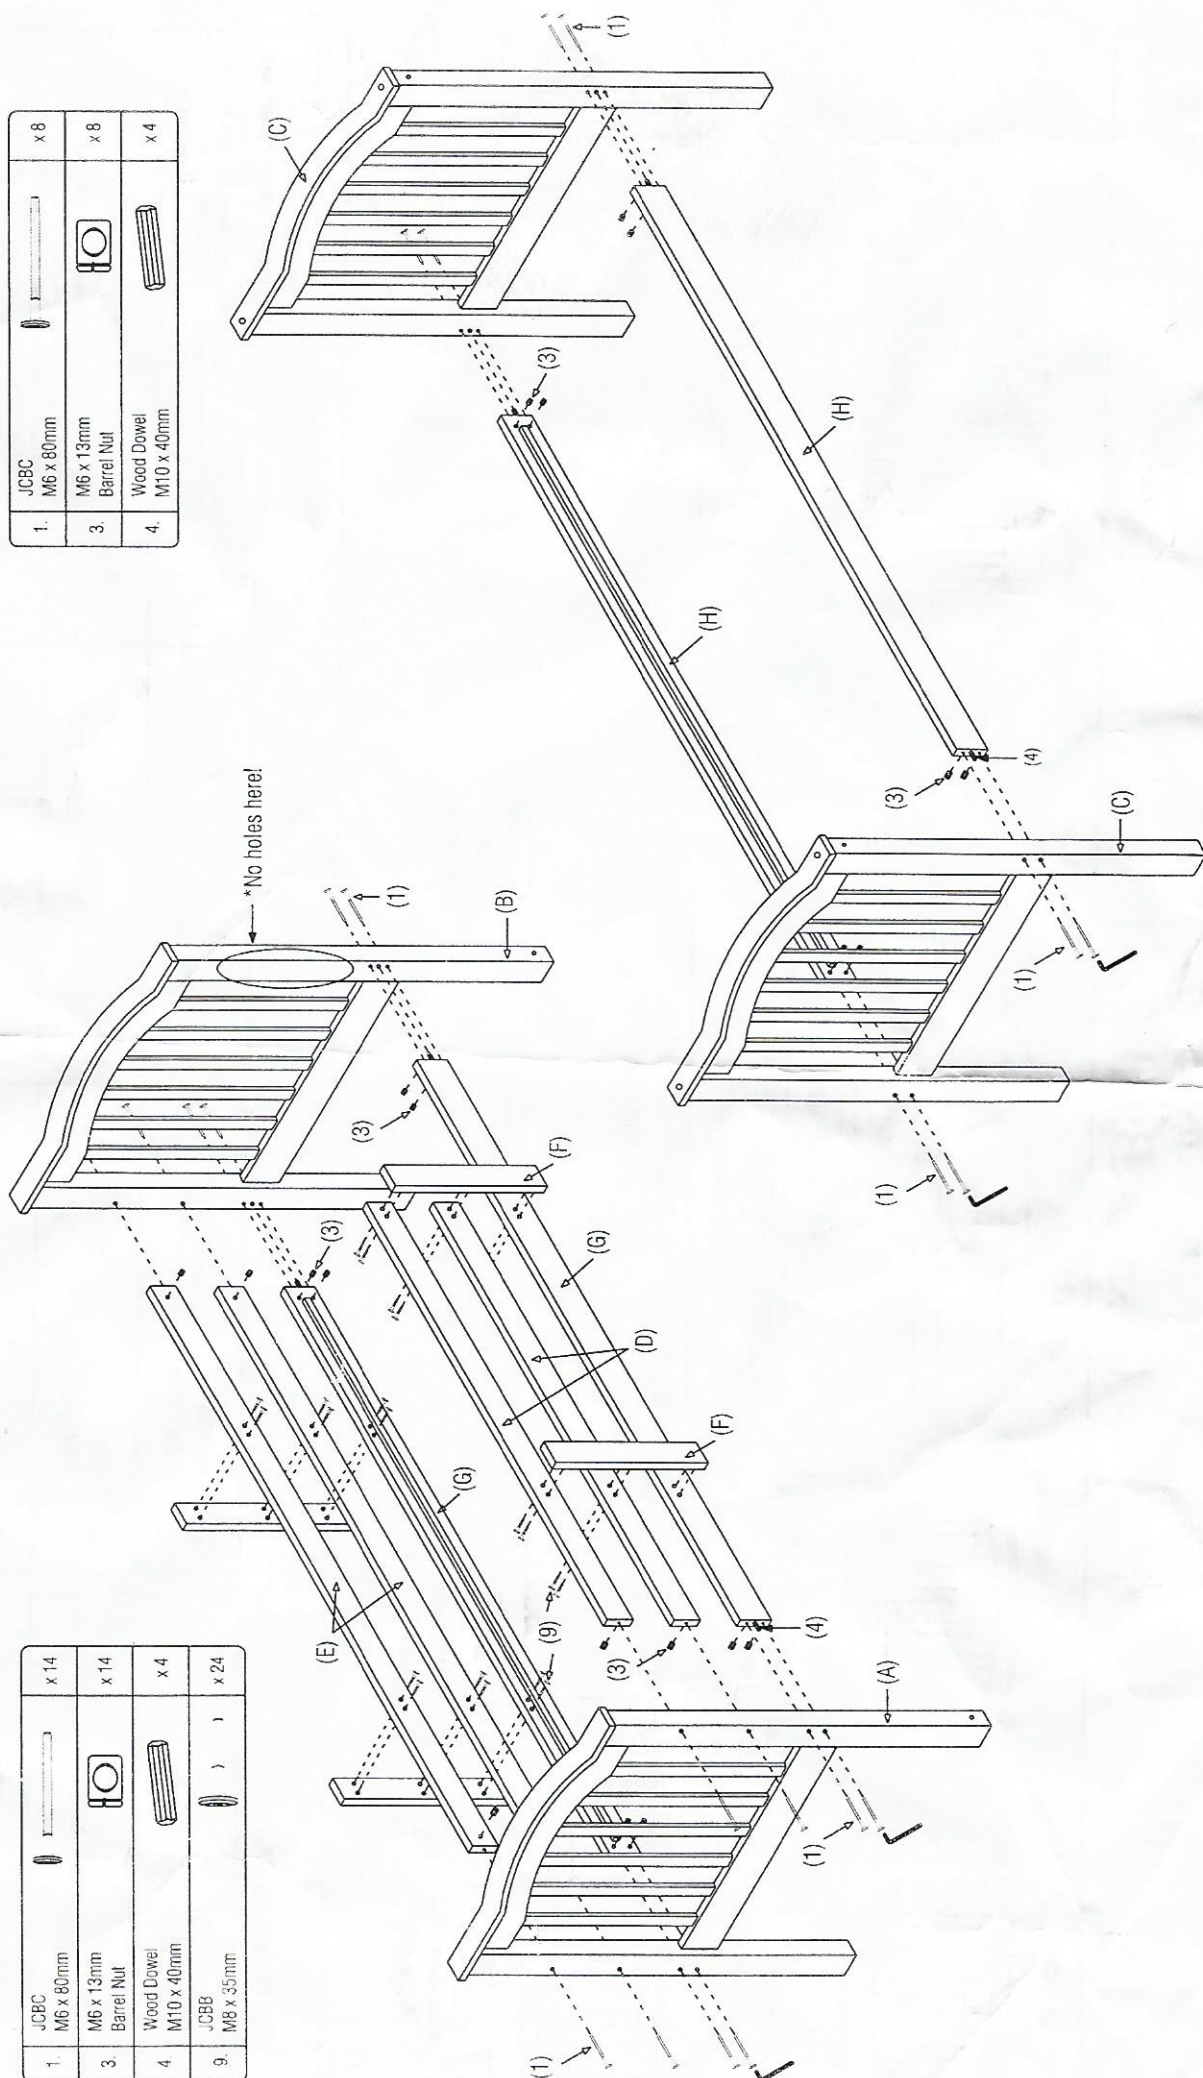


Assembly Instructions Cosmos Bunk Bed

3/4


3 Assemble the Slats (K) to the Upper & Lower Bunk

2	JCBC M6 x 35mm	x 16
6	CSK Screw M4 x 25mm	x 44

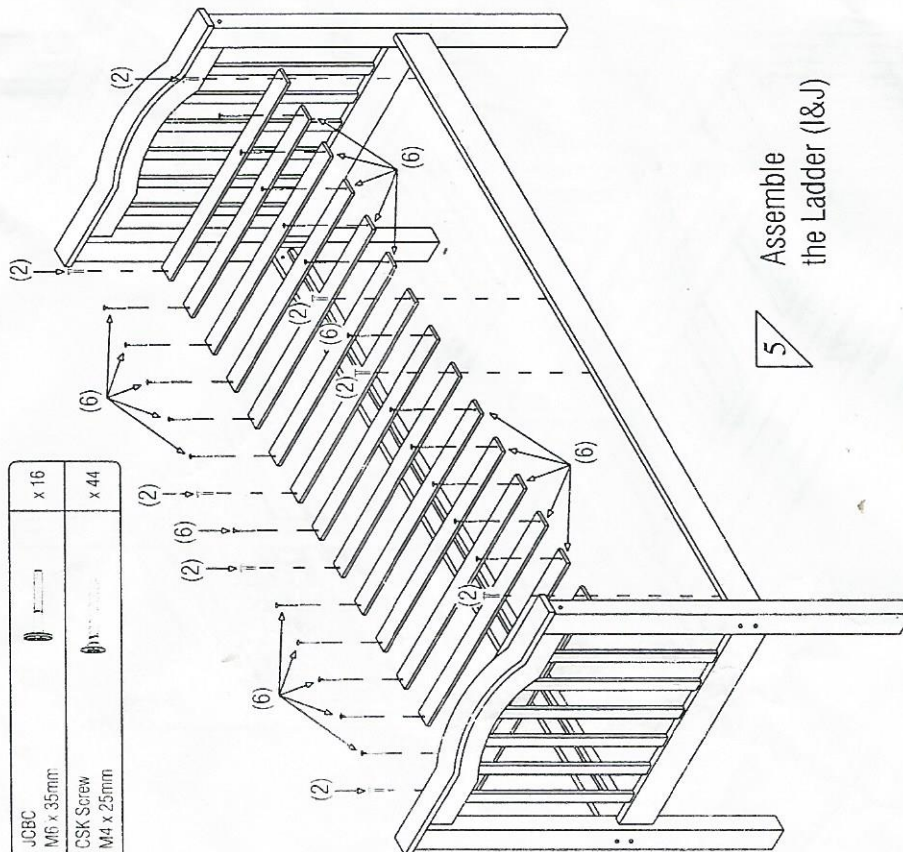



4 Join the Upper & Lower Bunk

5	Metal Pin M10 x 100mm	x 4
11	JCBC M6 x 60mm	x 8

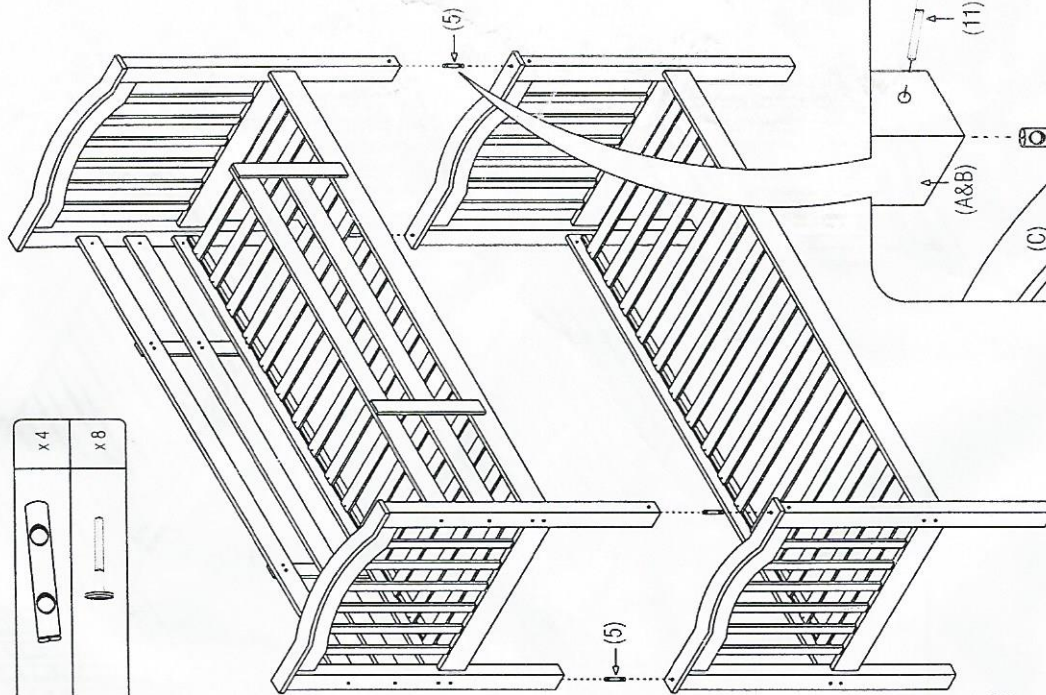

5 Assemble the Ladder (I&J)


9	JCBB M8 x 35mm	x 8
---	-------------------	-----

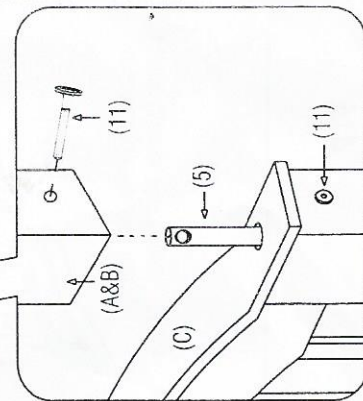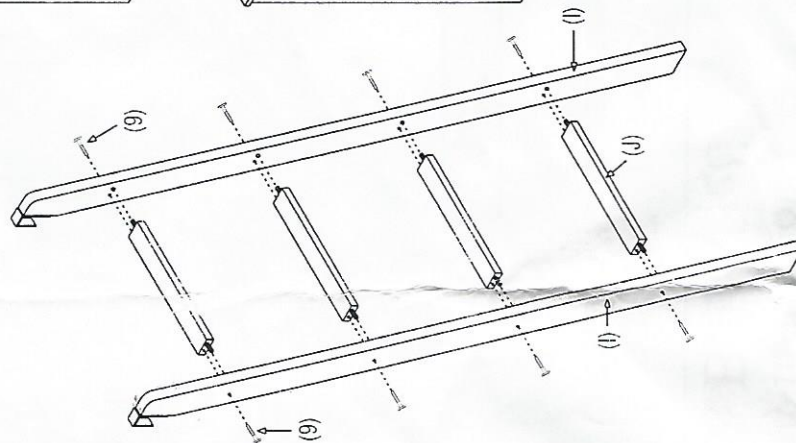

Assembly Instructions Cosmos Bunk Bed

4/4

6 Attach the Ladder to the Upper Bunk.

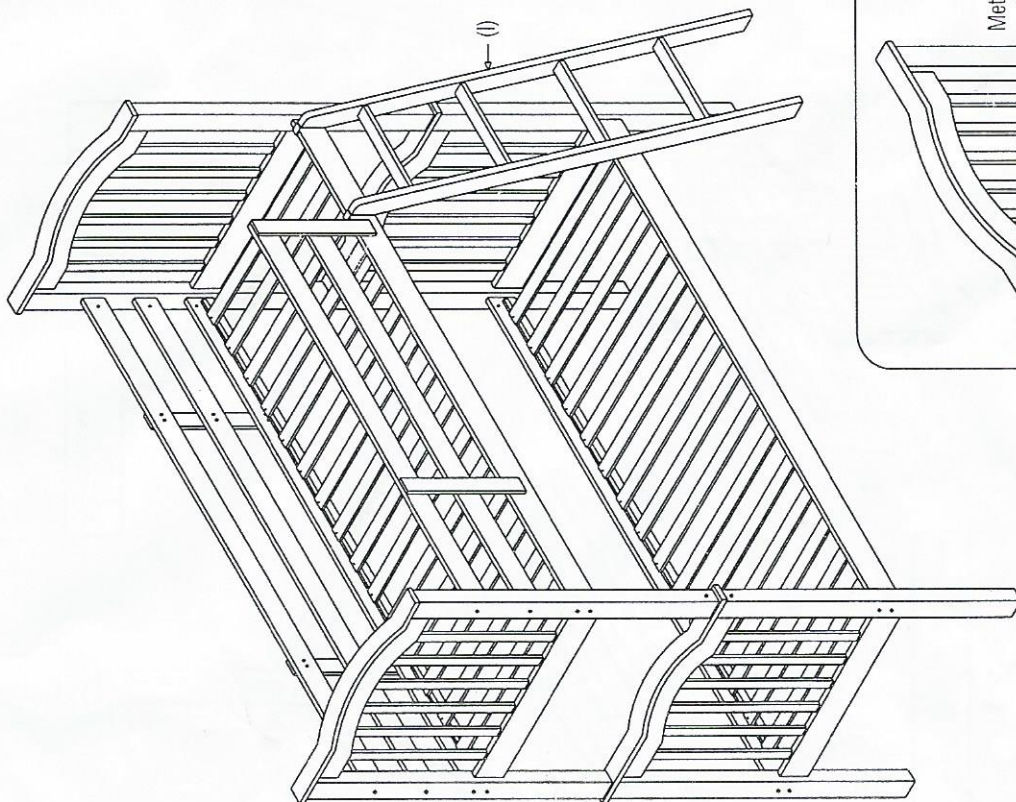

7

Optional use of bunk bed
as separate Twin Beds

Fit the Large Wood Buttons (8)
into the holes at the top.

